 




HOW IT WORKS




Pass wire through Kwik-Loc™

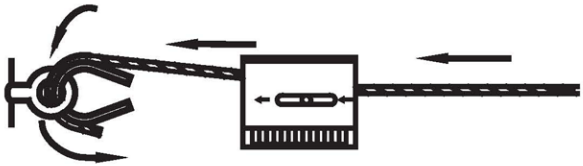


Loop wire through anchor

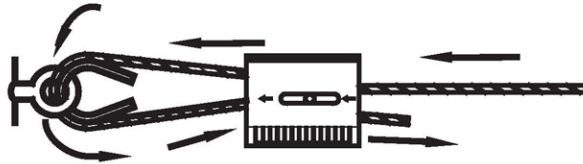

Pass wire back through Kwik-Loc™

 

Apply tension

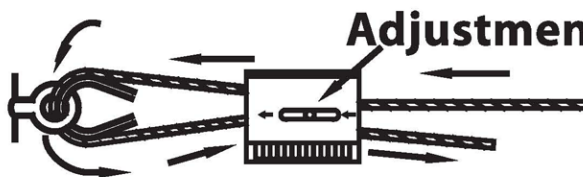

To adjust, take the load off and pull the tail slightly to disengage teeth, then release using adjustment pin